

# Bennett Pacific Series

## DIN (Dispenser Identification Number)

Effective Date: 03/24/2011

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34						
1	1	1	1	N	1	N	-	S	G	N	N	N	1	N	S	N	N	N	N	-	C	I	T	-	B	P	C	-	U	S	A	-	E	N	G	-	Q	Q	1

- 1 Dispenser Series: Always "1"
- 2 Price Tiers: 1=1 Price Tier, 2=2 Price Tier
- 3 Number of Products: 1, 2, 3, or 4
- 4 Number of Hose Outlets: 1, 2, or 4
- 5 Blender Option: N=Non-Blender, M=Mixer, B=Blender
- 6 Fueling Positions: 1=One Side, 2=Two Sides
- 7 Payment Options: N=None, L=Local Preset, P=Local Preset with Printer, C=Bennett Credit, D=Bennett Debit/Credit Reader, V=VeriFone Secure PumpPAY OP 4100, M=VeriFone MX 760
- 8 Fuel: S=Standard Fuels, A=Alcohol (E-85 Product), Note: Cannot Have Both Options in One Dispenser
- 9 Unit of Measure: (See Box 1)
- 10 Valance: N=No Valance, V=Valance, P = Valance power conduit
- 11 Vapor Recovery: N=None, A=Healy System Ready, B=Balanced, H=Healy Factory, F=Healy Incon Factory, G=Healy Veeder Factory
- 12 J-Box Option: N=None, J=J-Box
- 13 Number of Electrical Conduits: 1 (Standard) or 2 (Optional)
- 14 Speaker Option: N=None, S=Speaker, C=Speaker w/Call Button
- 15 Filter Type: S=Spin On (Standard), P=Petrodyme
- 16 Cash Acceptor: N=No Cash Acceptor, C=Cash Acceptor
- 17 Hose Retractor: N=None, H=Hose Retractor
- 18 Pump Security: N=Standard, D=Door Alarms
- 19 Pump Communication: C=Current Loop - Standard, R=RS485 - Allied
- 20
- 21 } Credit Network: 3 Letters (In Fields 20, 21, 22)
- 22 }
- 23 } Graphics. Assigned at factory during entry of the order. These, if used supercede the Lower Door Graphics Selection. Do not enter data into these data fields.
- 24 } Reserved for Bennett Order Entry. (In Fields 23, 24, 25)
- 25 }
- 26 } Country. Assigned at factory during entry of the order. These, if used supercede the Lower Door Graphics Selection. Do not enter data into these data fields.
- 27 } Reserved for Bennett Order Entry. (In Fields 26, 27, 28)
- 28 }
- 29 } Language. Assigned at factory during entry of the order. These, if used supercede the Lower Door Graphics Selection. Do not enter data into these data fields.
- 30 } Reserved for Bennett Order Entry. (In Fields 29, 30, 31)
- 31 }
- 32 } Suffix Number. Assigned at factory during entry of the order. These, if used supercede the Lower Door Graphics Selection. Do not enter data into these data fields.
- 33 } Reserved for Bennett Order Entry. (In Fields 32, 33, 34)
- 34 }



**Box 1 (Unit of Measure) [Field Position #9]**

Electronic Pump w/eCal Meters: G=Gallon, L=Liter, or I=Imperial Gallon

Electronic Pump w/mCal Meters: A=US Gallon, B=Liters, C=Imperial Gallon

**1**

Note: Order the valance canopy as a separate order line item.